


In order to assemble this item (QST-SLIDER) correctly, please read the following instructions carefully.
The illustrated operations can be carried out with different procedures, depending on the car floor.

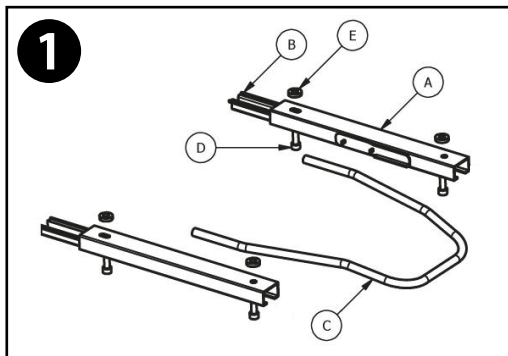

Parts of the QST-SLIDER


A = Base to fix to the seat (2x)

B = Base to fix to the floor (2x)


C = Adjustment rod (1x)

D = Screw (4x)


E = Spacer (4x)

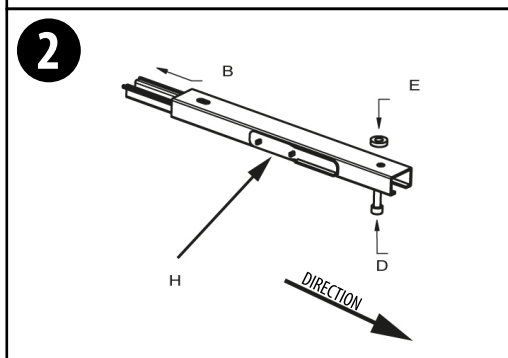


- Operate on lever H to free the movement between A and B.
- Let part B slide backwards as in image 2.
- Insert screw D and spacer E.
- Fix the seat without tightening the screws.

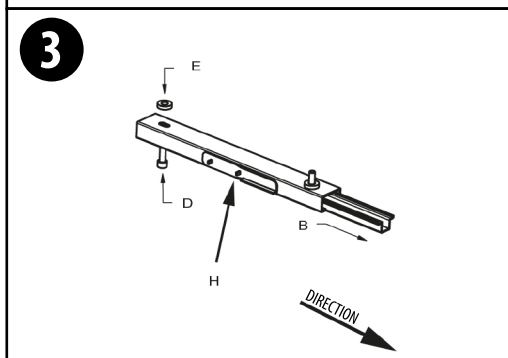

- Operate on lever H to free the movement between A and B.
- Let part B slide forward as in image 3.
- Insert screw D and spacer E.
- Fix to the seat without tightening the screws.

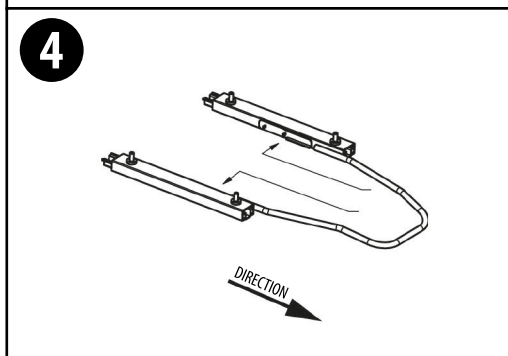

- Repeat points 2 and 3 for slideway.
- Firmly tighten the slideways to the seat.
- Let the slideways slide so that they are aligned.
- Insert adjustment rod C.

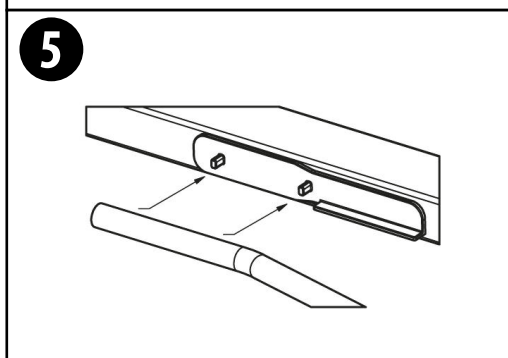

- Insert regulation rod C in its housings, as in image 5.
- Fix the seat and the slideways to the floor bracket relevant for the specific car.